


# Installation: **Swivel Vent Wind Wing Door Weatherseal Set**

(Part#: 670641K)

---

- 1** Remove inner frame by:  
Removing top screw  
Removing nut, spring & washers from bottom pivot

- 2** Cut both ends as shown below:

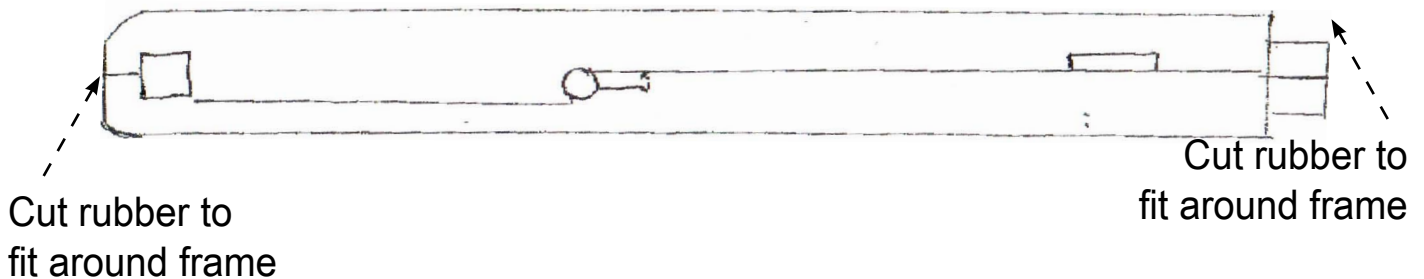


- 3** For additional instructions, see attached sheet (page 2)

# Installation: Swivel Vent Wind Wing Door Weatherseal Set (Part#: 670641K)

---

## VENT WINDOW RUBBER INSTALLATION INSTRUCTIONS

*Metro Moulded Parts, Inc. offers excellent reproductions of original parts, with greater durability.*

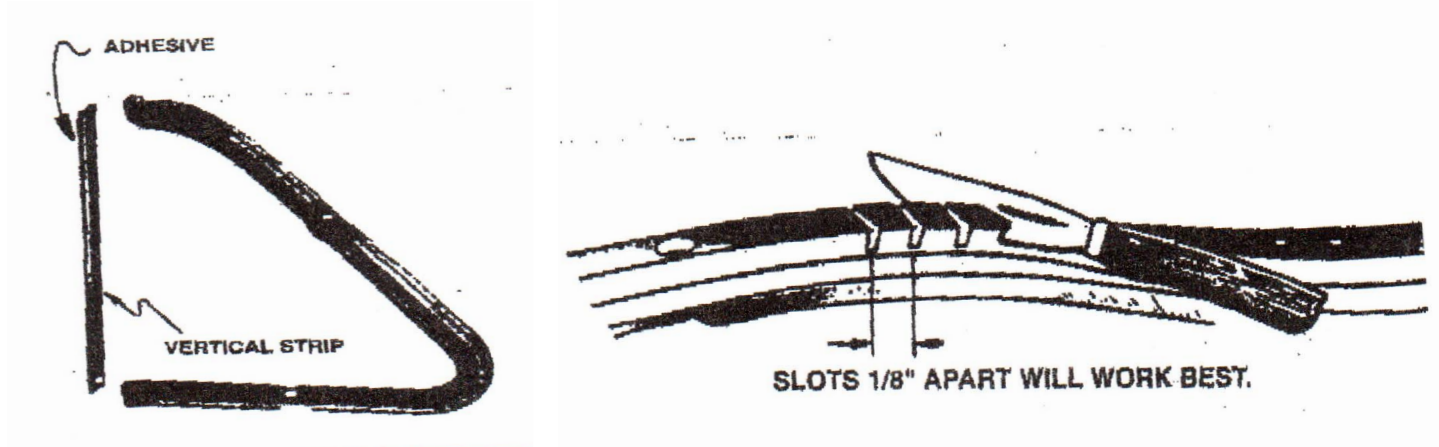

- 1 CAUTION:** Make sure your new seal will do the job before removing the old rubber and window frame.
- 2 PREPARATION:** Remove old rubber and any rust deposits before starting. Otherwise new rubber may be difficult to install.
- 3 SLOTS:** Carefully cutting slots on the marked areas on the back of your Vent Window Rubber will remove any wrinkles in the sealing lip. Cuts should be 1/8" apart.
- 4 LUBRICATION:** Apply a lubricant to channel and rubber to ease installation. This is important to avoid damage to both the rubber and the frame.
- 5 INSTALLATION:** Install both pivot areas first. Then carefully install the rest of the rubber in the middle section.
- 6 ENDS:** In some rare cases, ends may have to be cut to exact length or notched. This should be carefully marked out before cutting.

**NOTE TO OUR CUSTOMERS:** Vent windows seals are some of the most difficult parts to manufacture due to the many lips, notches, etc. Some details are unfeasible to manufacture. Your understanding is appreciated.